


## MPP2000 multi purpose paint tester

A handy and low-cost device for testing various characteristics of paints before-, during and after application.



Order # **110-MPP2000**

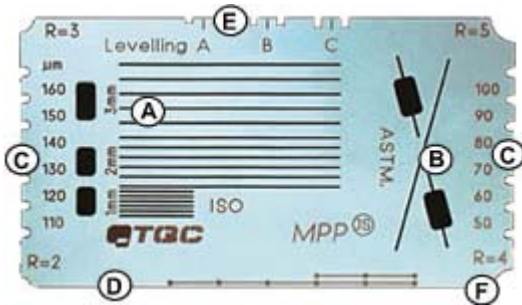

### Supply

Complete kit with special adhesive tape, heavy-duty utility knife with spare blades, MPP2000 and a sturdy plastic case.



**A**-Template with grid for 1, 2 and 3 mm pattern for cross cut adhesion testing by means of using an (always-sharp) utility knife. Meets the ISO2409 standard.




**B**-Template for making the ASTM X-cross for adhesion testing. Meets the ISO3359 standard.



**C**- WFT-gauge for measuring the thickness of wet coatings. Range up to 160µm. Meets the ISO2808 standard.



**D**- Film applicator to apply a wet coating film with increasing thickness up to 200µm eg. To check the hiding-power.

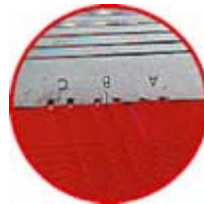

**E**- Device to check the viscosity of paints by observing the flow characteristics of the marks drawn in a wet film. System ASTM2801-4400.



**F**- Templates to check the roundness of edges on steel, aluminum or wood. Too sharp edges will lead to insufficient coverage.