


## 137-Series FB-PA Mechanical Puncture Tester



OH-1 Optional Handle

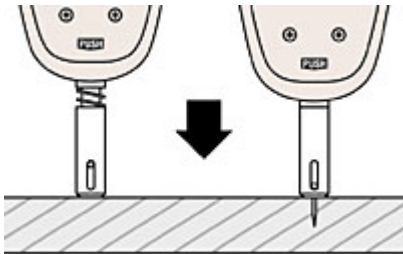

- Capture true puncture strength in peak mode
- Max Load: 50 lbs.
- Outstanding accuracy of  $\pm 0.3\%$
- Retains a high degree of accuracy for extended periods
- Simple, rugged, virtually maintenance free
- Ergonomic, heavy-duty metal construction
- No batteries needed
- Intrinsically safe in hazardous environments
- Overload capacity 165 lbs. on all ranges
- Tare ring
- Optional handle available

**FB-PA Ranges (Resolution) Accuracy:** FB  $\pm 0.3\%$  F.S.

Pounds	
Model	Capacity (Resolution)
FB-PA-30	30 lb. (0.25 lb.)
FB-PA-50	50 lb. (0.5 lb.)

Newton and kg units are available.



Optional large carrying case

Model FB-PA is a mechanical tester mounted with PA-7A test fixture to check the puncture resistance or hardness of materials like dry wall, foam boards, cardboard, etc. The test fixture is extremely rugged, all stainless steel construction, which features a pin encased by a spring loaded housing. Pressure on the housing exposes the stainless steel pin which penetrates the test sample to a consistent depth adjustable to 0.5". Ideal for handheld penetration tests or mounting to a test stand. Available in two ranges. OH-1 optional handle is also available.

Distributed in Canada by:  
**QPC Instruments Inc.**